


SFS Hinge Adjustment

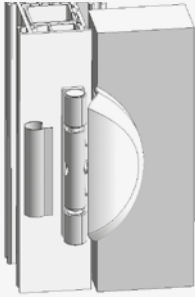


To adjust an SFS hinge, follow the 7 simple steps below:



1. Remove the cover cap.




2. Unscrew the security screws and remove the caps.

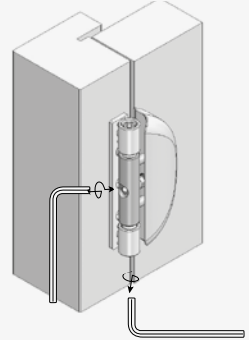

3. Horizontal adjustment:
Adjust by turning the centre screw with a 5mm Allen Key.

4. Height adjustment:
Adjust by turning the bottom screw with a 5mm Allen Key.

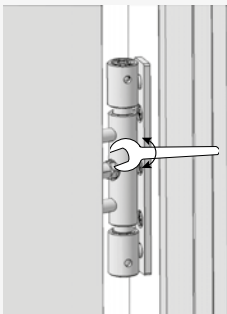

5. In difficult situations it is possible to make the horizontal adjustment from inside by turning the hexagonal nut with a 9mm spanner.



6. Refit the caps and fasten the security screws.



7. Refit the cover cap on the central barrel.